


AC6-SP+ Quick-Start Guide

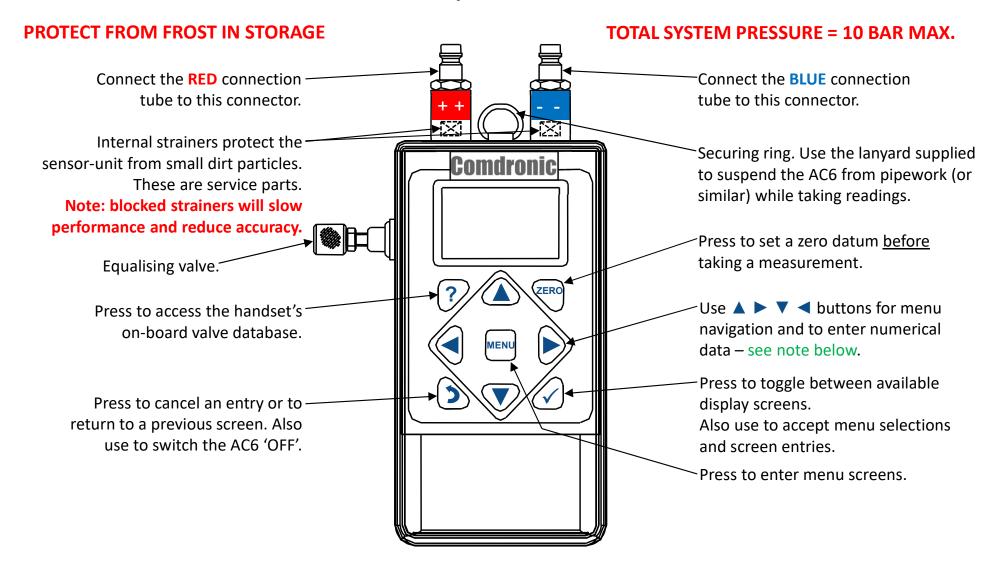

Numeric entries: use the ▲ ▼ buttons to increase or decrease values. Use the ▶ button to add a digit. If a decimal point is required, press the ▼ button when the zero digit is showing. To enter a negative number, press the **ZERO** button before any number is added.