

PRESS & HOLD MENU BUTTON TO SWITCH THE AC6 'ON'.

AC6-HP Quick-Start Guide

PROTECT FROM FROST IN STORAGE

Connect the **RED** connection tube to this connector.

Internal strainers protect the sensor-unit from small dirt particles. These are service parts.


Note: blocked strainers will slow performance and reduce accuracy.

Equalising valve.

Press for context-sensitive Help (available for most screens).

Use **▲ ▶ ▼ ◀** buttons for menu navigation and to enter numerical data – **see note below**.

Press to cancel an entry or to return to a previous screen. Also use to switch the AC6 'OFF'.

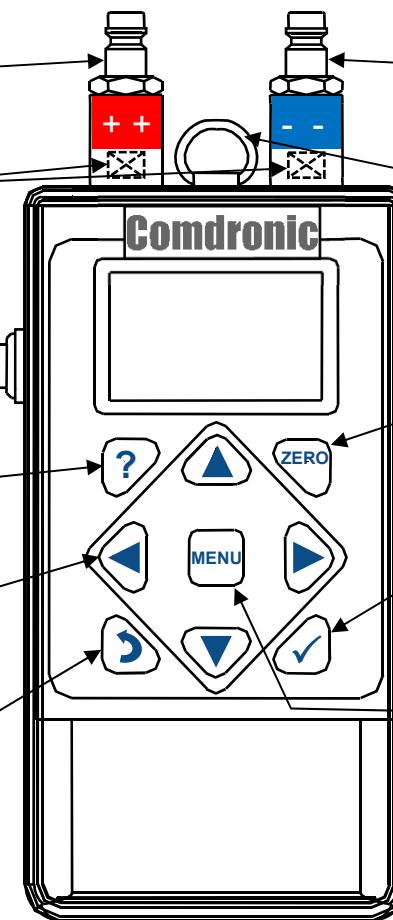

TOTAL SYSTEM PRESSURE = 20 BAR MAX.

Connect the **BLUE** connection tube to this connector.

Securing ring. Use the lanyard supplied to suspend the AC6 from pipework (or similar) while taking readings.

Press to set a zero datum before taking a measurement.

Press to accept menu selections and screen entries.

Press to enter menu screens.

Press **MENU** again for language options.



Numeric entries: use the **▲ ▼** buttons to increase or decrease values. Use the **▶** button to add a digit. If a decimal point is required, press the **▼** button when the zero digit is showing. To enter a negative number, press the **ZERO** button before any number is added.